
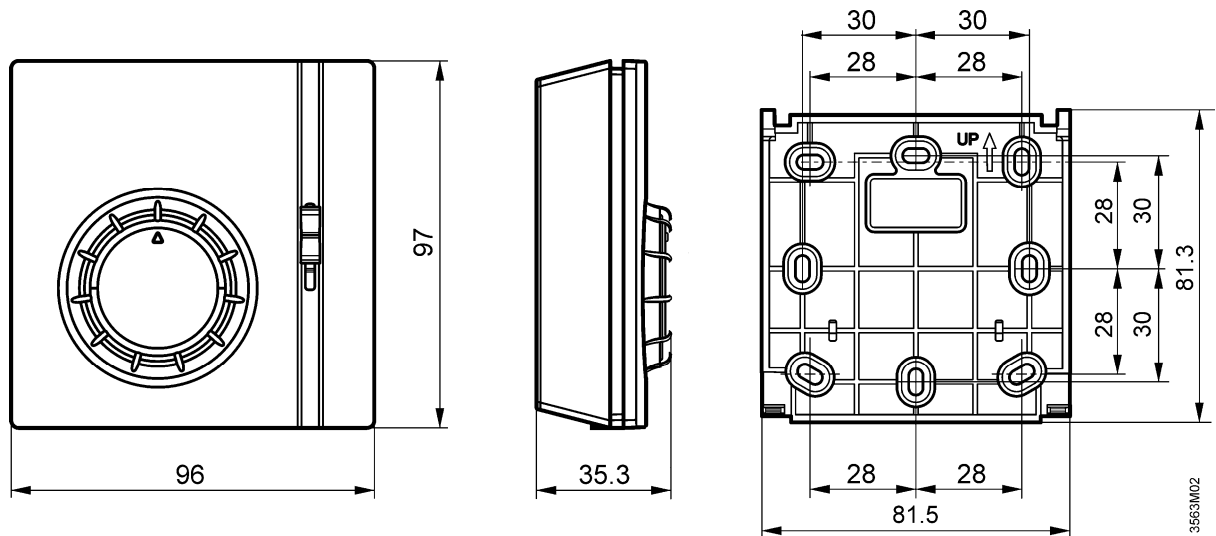


- cs** Montážní list
- da** Installationsvejledning
- de** Installationsanleitung
- el** Οδηγίες Εγκατάστασης
- en** Installation Instructions
- es** Instrucciones de montaje

- fi** Asennusohje
- fr** Instructions d'installation
- hu** Telepítési leírás
- it** Istruzioni di montaggio
- nl** Installatie-aanwijzing
- pl** Instrukcja montażu



- pt** Instruções de montagem
- sk** Návod na montáž
- sv** Installationsanvisning
- tr** Montaj talimatları
- zh** 安装说明书

RAA...

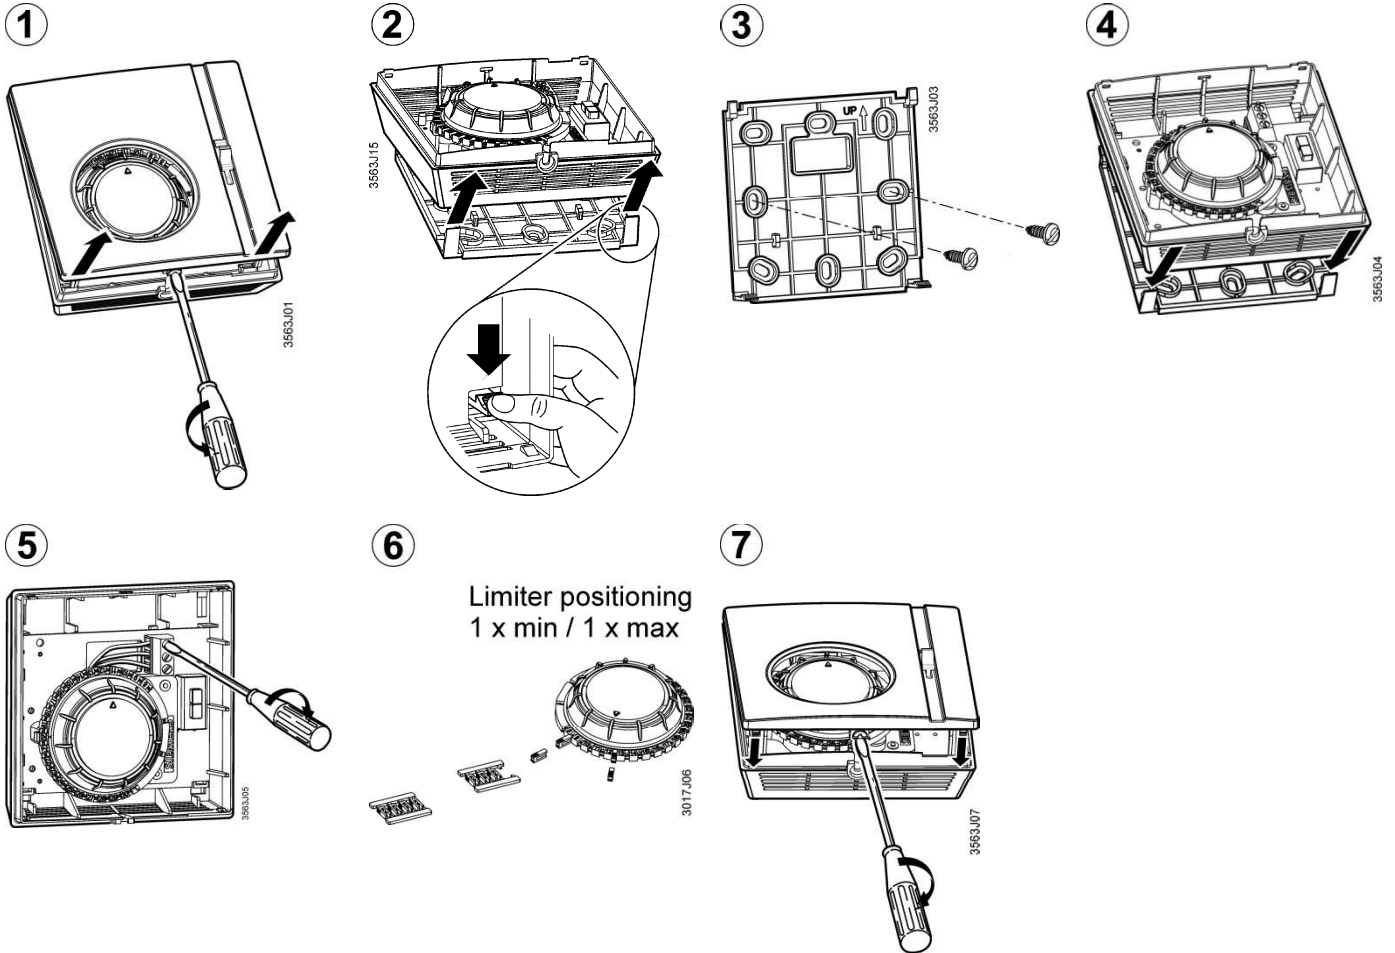



Dimensions in mm

RAA11 / RAA21 / RAA21/S

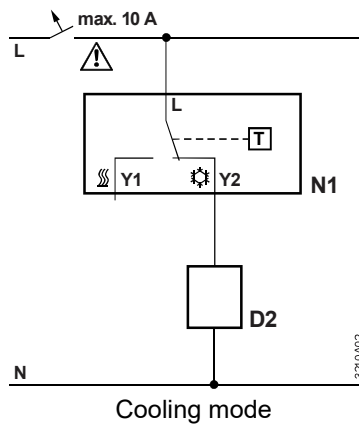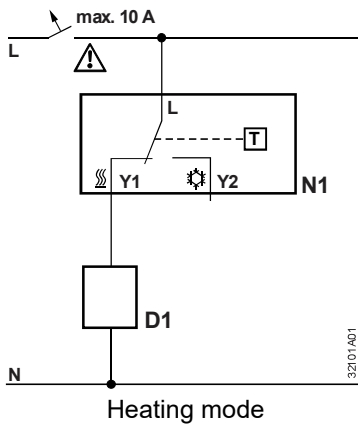


- D1 Zone valve or thermal valve for heating
- D2 Zone valve or thermal valve for cooling
- L Switching voltage
AC 24...250V
- N1 Room thermostat
- Y1 Control output
"Heating", AC 24...250V
- Y2 Control output
"Cooling", AC 24...250V
- N Neutral
- T Thermostat element
(gas-filled diaphragm)

RAA31

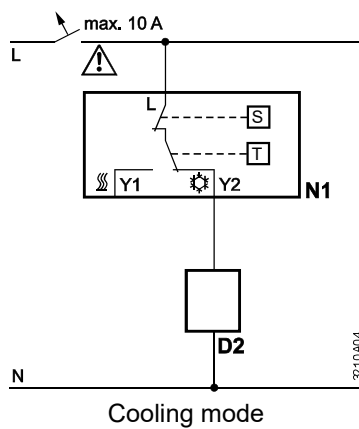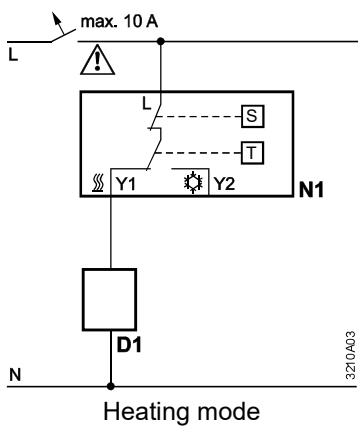

- D1 Zone valve or thermal valve for heating
- D2 Zone valve or thermal valve for cooling
- L Switching voltage
AC 24...250V
- N1 Room thermostat
- S ON/OFF switch
- Y1 Control output
"Heating", AC 24...250V
- Y2 Control output
"Cooling", AC 24...250V
- N Neutral
- T Thermostat element
(gas-filled diaphragm)

RAA41 / RAA41/S

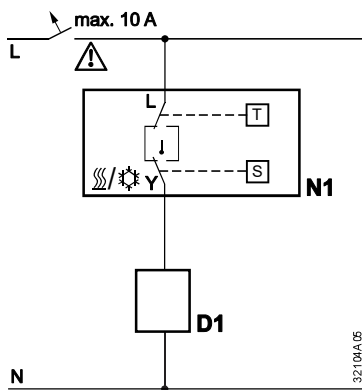

- D1 Zone valve or thermal valve for heating
- L Switching voltage
AC 24...250V
- N1 Room thermostat
- S Selector for Heating / OFF / Cooling
- Y Control output
"Heating", AC 24...250V
- T Thermostat element
(gas-filled diaphragm)